



Mutable Instruments  
Anushri - rev. C

cc-by-sa, Olivier Gillet

Remove LT1054 (IC24)  
before connecting  
Eurorack power supply



12V GND +12V  
C38  
100L

C43  
100L  
C44

C46  
100L  
C49  
100U

C52  
100U  
C57  
100U

7905 IC21  
7805 IC14

1N4001  
D2

1N4001  
D2